




Installation Instruction of WPC Decking


Step 1. Install the keel (joists)

When you install the decking, first you should make hardening preferment to the ground, and then fix the keel (joists) in the hardened ground. We recommend keel (joists) pitch for the 35-40mm keel (joists) spacing can be shorten as requested.

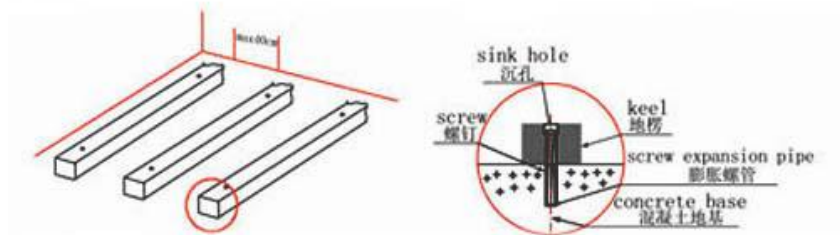

Step 2. Decking with Grooves

Regarding a 3cm space to the building when installing the decking. The joint kit of decking is clip. Drilling should be smaller than the diameter of screw diameter of 3/4 in order to increase the self-tapping screw grip of the nail.

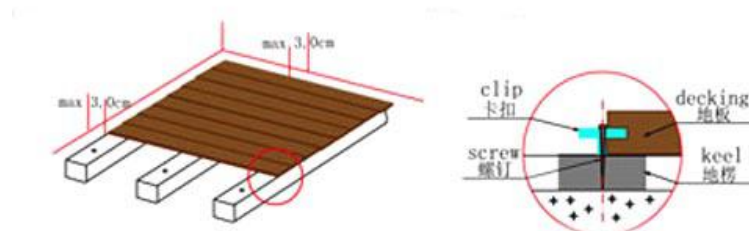

Step 3. Skirt Board Fix

Choose complementary board to edge according to the size of joist and decking after completing the construction.

